



[www.customcargrills.com](http://www.customcargrills.com)  
[info@customcargrills.com](mailto:info@customcargrills.com)

customcargrills.com LLC  
PO Box 90004  
Grand Rapids, MI 49509  
(616) 889-2985

Year: 1992-1995  
Make: Pontiac  
Model: Grand Am GT

## INSTALLATION INSTRUCTIONS




**What's in the Box:** (1) Grill Mesh Piece.



**Tool List:** Needle Nose Pliers.

### Mesh Installation:

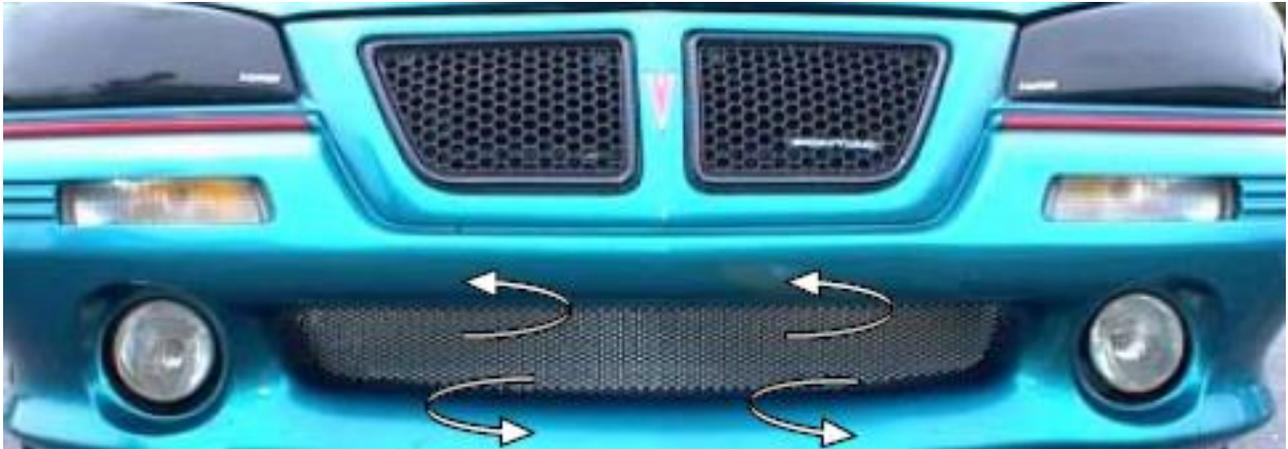

1. Take the grill insert and make sure you understand how it is supposed to go on. The top part and the bottom part are the same but the insert should be pointing in a fashion of which the clips will attach to the bumper from behind.
2. Put the grill insert behind the opening and center the grill insert and push the clips onto the existing grill. You may have to get under the car to accomplish this.
3. The clips should be near the arrows on the above picture.

PLEASE NOTE: The instructions provided are the suggested installation method. If you feel that the installation instructions are inadequate or unsafe then please feel free to develop your own installation techniques that fit your exact needs.

customcargrills.com llc is not liable for any personal or property damage resulting from our products. If you have any suggestions on how to improve our installation instructions then please email your comments to [info@customcargrills.com](mailto:info@customcargrills.com) .